



COMMON BORDER STYLES

SURFACE MOUNT

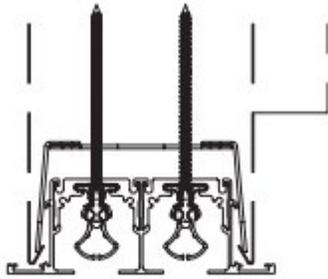

Type 2

FLANGE FRAME CONCEALED MOUNTING

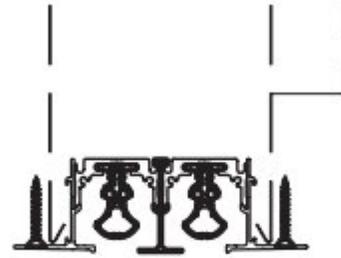


Type 8A

CONCEALED PLASTER FRAME
SCREW MOUNTING


LAY IN

15/16

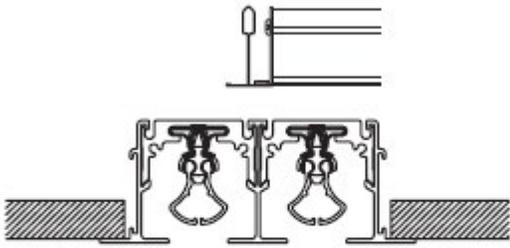

Type 14


FLUSH MOUNT LAY-IN

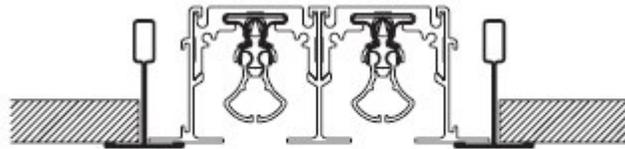

Type 15

T-BAR LAY-IN

9/16 TEGULAR

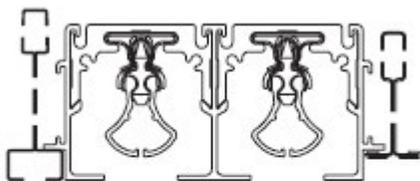

Type 17


9/16 TEGULAR LAY-IN

SPECIALITY (TECHZONE & TECHSTYLE)



Type 18


TECHZONE LAY-IN (9/16 TEGULAR)

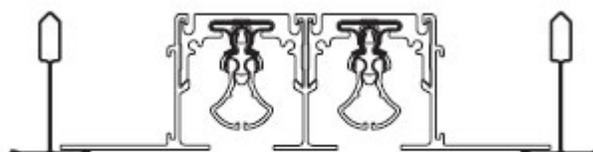


Type 19

TECHZONE LAY-IN (15/16 FLAT TEE)


SPECIALITY (TECHZONE & TECHSTYLE) CONTD.

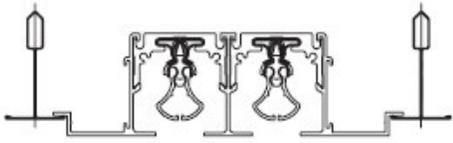

Type 20
TECHZONE LAY-IN (15/16 TEGULAR)

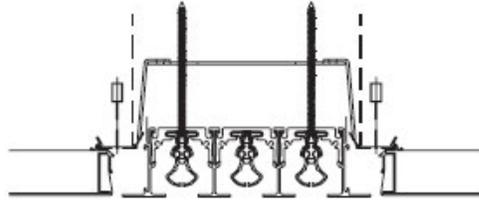


Type 21 & 22
TECHSTYLE LAY-IN

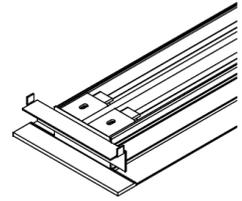


TYPE AMT
METALWORKS TECHZONE
TORSION SPRING CEILING

EXPOSED CEILING

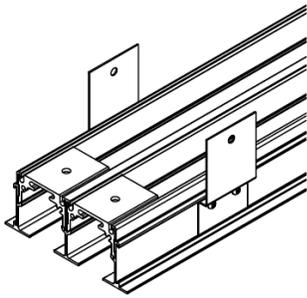


TYPE 9A
NARROW FRAME
FOR SUSPENDED CEILING

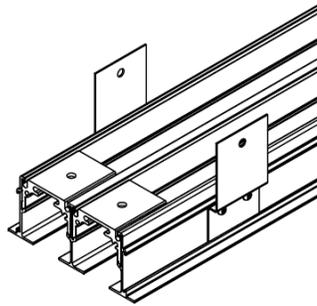

TYPE 9B
WIDE FRAME
FOR SUSPENDED CEILING


SPIRAL DUCT

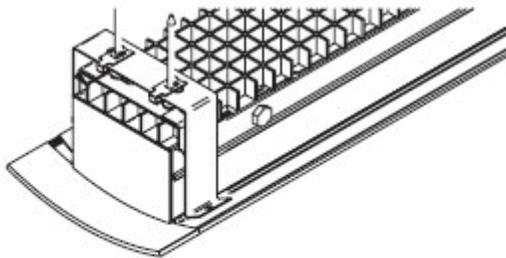


Type 16
SPIRAL DUCT MOUNT

ALTERNATIVE BORDER STYLES


SURFACE MOUNT




Type 1 & 1B
FLANGE FRAME SCREW (1) NO
SCREW (1B) MOUNTING

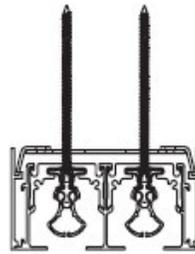


Type 3
FLUSH FIXTURE MOUNT
CONCEALED MOUNTING

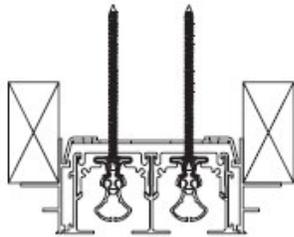

Type 6
FLUSH PLASTER FRAME
CONCEALED MOUNTING

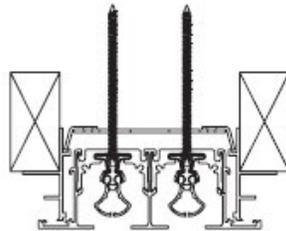


Type 7
FLANGE PLASTER FRAME
CONCEALED MOUNTING

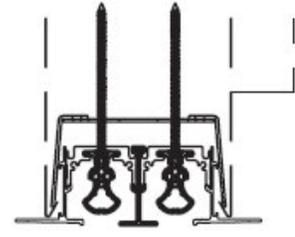


Type 8
CONCEALED PLASTER FRAME
CONCEALED MOUNTING

*8A recommended for mud in

LAY IN

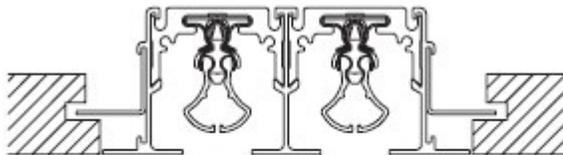

Type 12
CONCEALED SPLINE

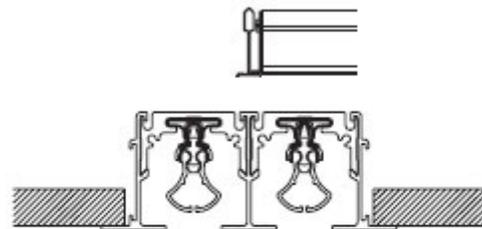

Type 916
FLUSH MOUNT LAY-IN (9/16 FLAT TEE)