



**MANUAL – ASSEMBLY**

---

# Acoustic Wall Mount Panel

QLP

v001 – Issue Date: 03/18/19

© 2019 Price Industries Limited. All rights reserved.

**PRICE**<sup>®</sup>

# ACOUSTIC WALL MOUNT PANEL

---

## TABLE OF CONTENTS

### **Introduction**

Introduction.....	1
-------------------	---

### **Assembly**

Installation Layout.....	2
Wall Panel Installation .....	3
Ceiling Panel Installation .....	4
Flashing Installation .....	5
Section Details .....	6

# ACOUSTIC WALL MOUNT PANEL

## INTRODUCTION

### Introduction


These instructions are a general guide to the assembly of Price acoustical wall mount panels, to be used in conjunction with the enclosure assembly drawings. Carefully read and understand these instructions prior to assembling the wall mount panels.

Please contact your Price representative for any questions or concerns regarding the assembly procedure.

Check shipment upon arrival against bill of material. Notify your Price representative in case of any shortages.

### PANEL LABEL BREAK DOWN ▼

#### STANDARD PANEL KEY

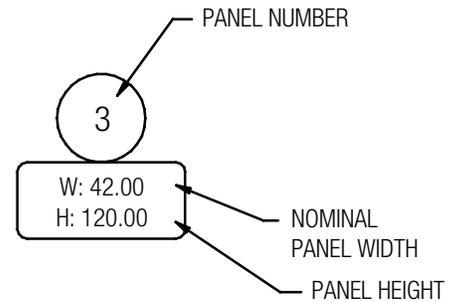

\* ACTUAL O/A WIDTH OF PANEL = NOMINAL + 2.00"


# ACOUSTIC WALL MOUNT PANEL

## ASSEMBLY


### Installation Layout

Chalk out the perimeter of the enclosure based on the plan view. Mark location of panels and all openings (doors, access panels, etc.) on existing structure.

#### CEILING PANELS INSTALLATION LAYOUT ▼

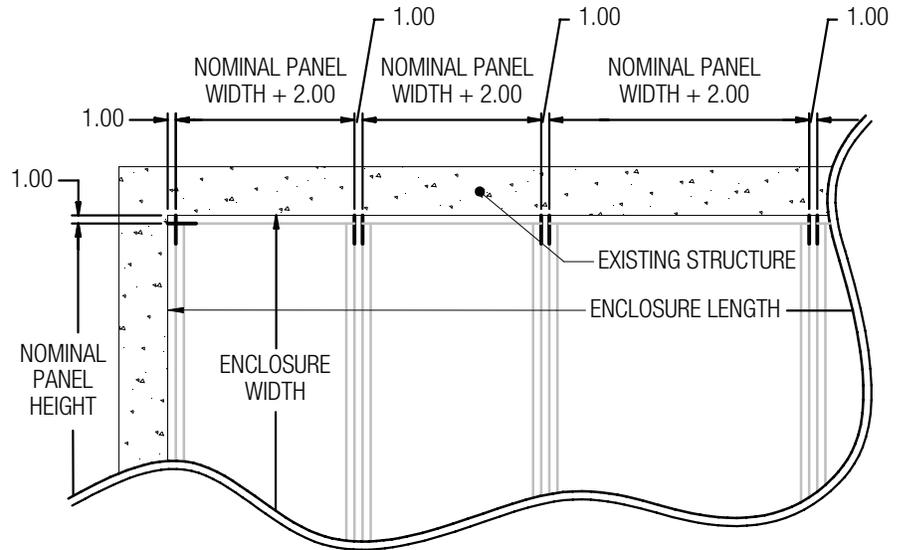

#### WALL PANELS INSTALLATION LAYOUT ▼

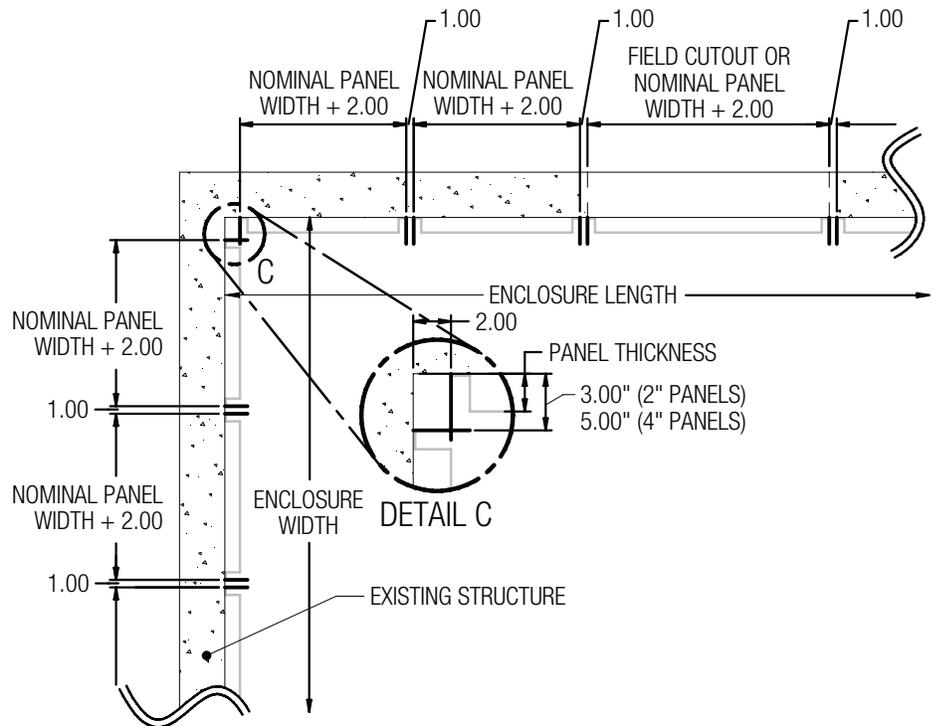

# ACOUSTIC WALL MOUNT PANEL

## ASSEMBLY

### Wall Panel Installation

1. Using the enclosure assembly drawings, follow the wall panel sequence as indicated.


**NOTE:** If enclosure contains ceiling panels, it must be in place prior to installing wall panels.

2. All panels are individually marked to match numbering listed on the enclosure assembly drawing.
3. Lay the first panel on the existing wall. Install fasteners 1-1/2 in. from top and bottom of the panel on flanges to hold panel position. Continue installing fasteners along flanges, one every 18 in..

**NOTE:** Recommended to start at the corner of enclosure.

4. Install the next panel in sequence.

**NOTE:** Leave 1 in. gap between flanges.

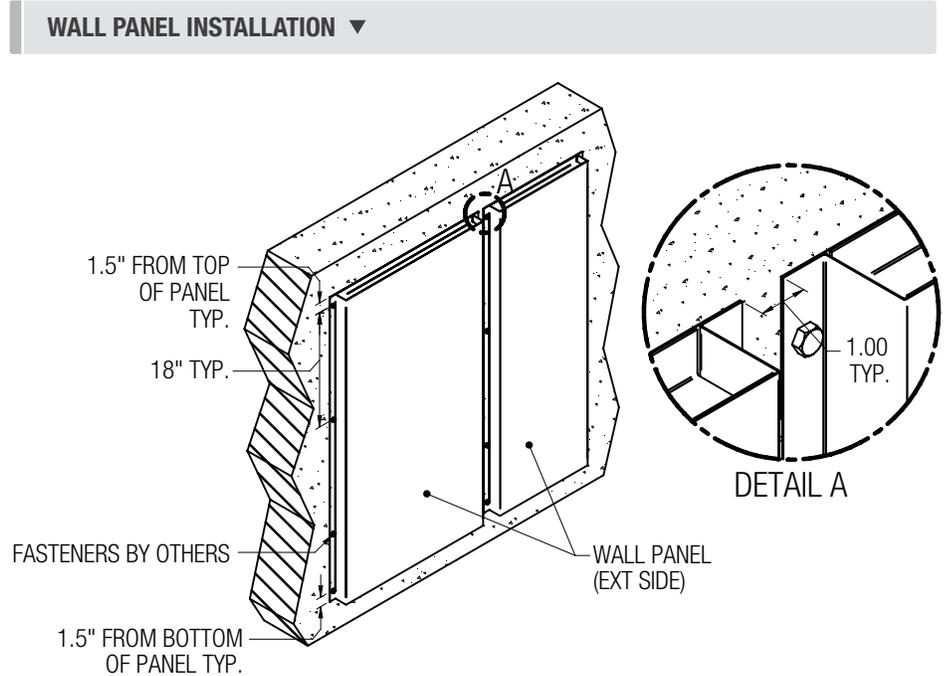

# ACOUSTIC WALL MOUNT PANEL

## ASSEMBLY

### Ceiling Panel Installation

1. Review the ceiling plan on the assembly drawings and locate the necessary panels.
2. Lay the first panel on the existing ceiling.

**NOTE:** Offset 1 in. from edges of the panel to the existing structure.


3. Install fasteners 1-1/2 in. from top and bottom of the panel on flanges to hold panel position. Continue installing fasteners along flanges, one every 18 in..

**NOTE:** Recommended to start at the corner of the enclosure.

4. Install the next panel in sequence.

**NOTE:** Leave 1 in. gap between flanges.

5. After installation of all ceiling panels is complete, proceed to wall panel installation if required. Be sure to add 1 in. gap between face of ceiling panels and top of wall panels.

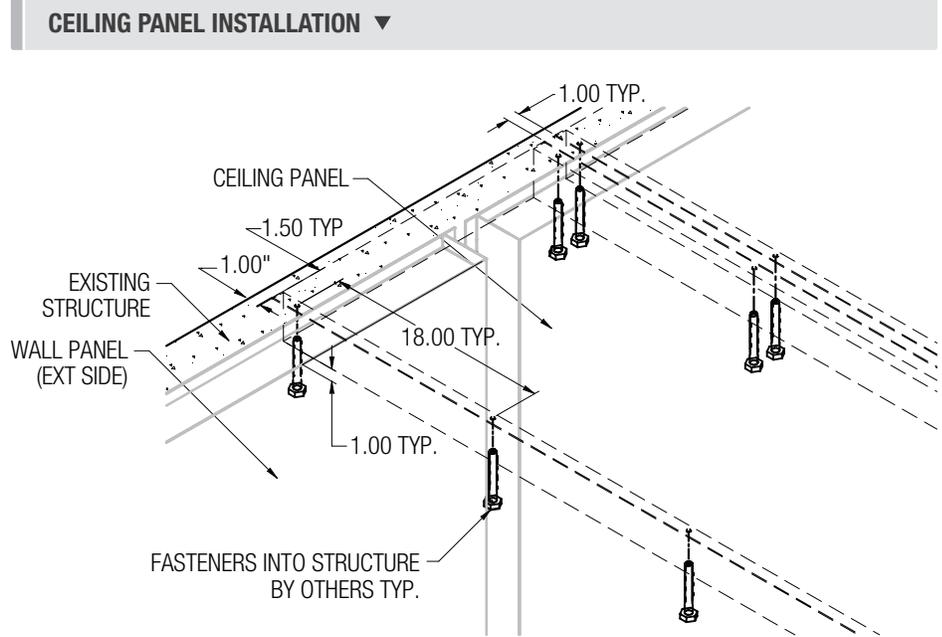

# ACOUSTIC WALL MOUNT PANEL


## ASSEMBLY

### Flashing Installation

1. All flashing is supplied in 8' or 10' lengths, to be field cut to length as required. Flashing is to be secured to panels with tek screws through each panel joint and on 12 in. centers between joints.
2. Use corner flashing for corners.

**NOTE:** All horizontal corner flashing is to be installed first.

3. Vertical corner flashing is to be installed flush to edge of horizontal corner flashing and run to the bottom of the wall panel. The kicks on the flashing should be cut to match wall panels.
4. Install tek screws to both legs of vertical corner flashing with tek screws every 12 in. on center.
5. **With horizontal corner flashings:** After installation of all corner flashings is complete, lay joint flashing on center of two panels. Be sure both ends of joint flashing are flush with edges of corner flashing creating butt joint. Install tek screw 3 in. from both ends of flashing to hold flashing position. Continue installing tek screws along flanges, one every 12 in..
6. **Without horizontal corner flashings:** After installation of all panels is complete, lay joint flashing on center of two panels. Be sure both ends of joint flashing are flush with both ends of wall panel. Install tek screw 3 in. from both ends of flashing to hold flashing position. Continue installing tek screws along flanges, one every 12 in..

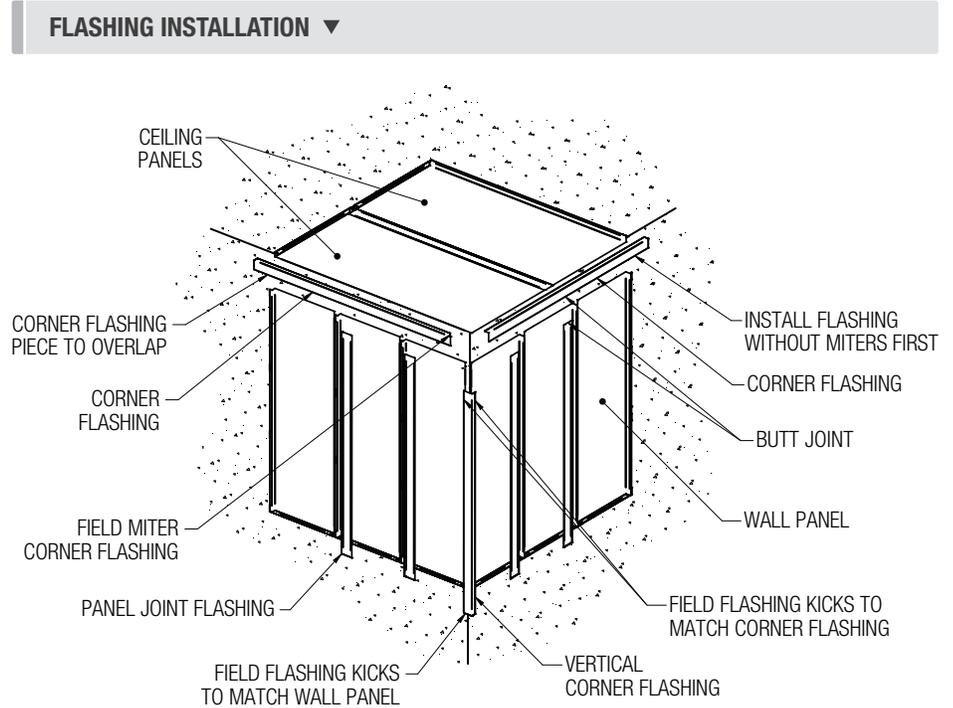


# ACOUSTIC WALL MOUNT PANEL


## ASSEMBLY

### Section Details


PANEL JOINT SECTION DETAIL ▼

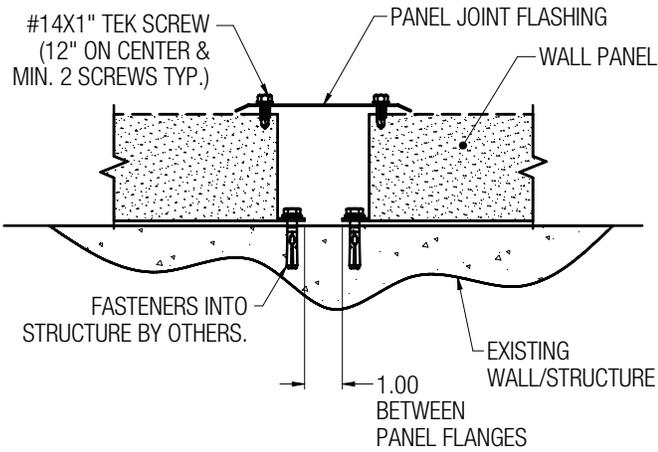


PANEL CORNER JOINT SECTION DETAIL ▼

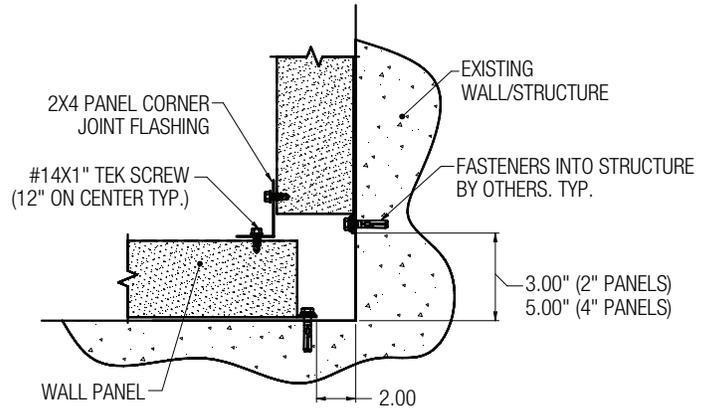

WALL TO CEILING PANEL SECTION DETAIL ▼

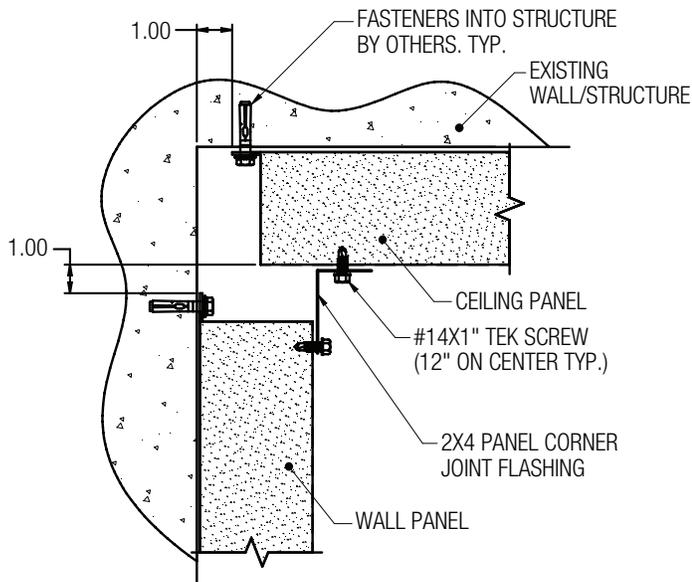

STACKED PANEL SECTION DETAIL ▼

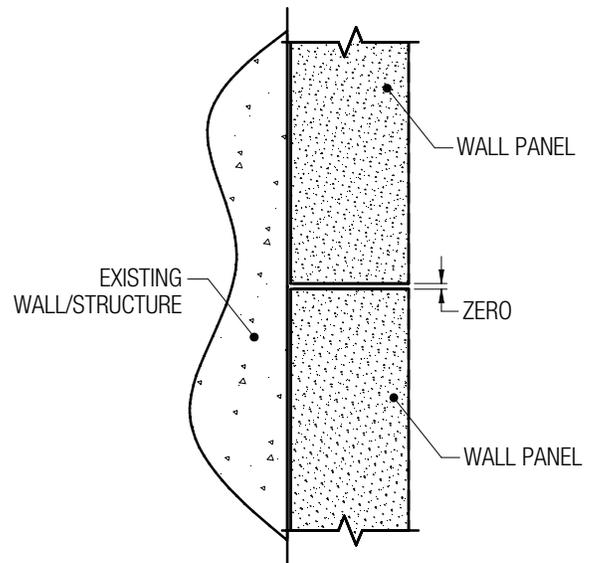







---

This document contains the most current product information as of this printing.  
For the most up-to-date product information, please go to [priceindustries.com](http://priceindustries.com)

© 2019 Price Industries Limited. All rights reserved.

**PRICE**<sup>®</sup>

The Science of Comfort<sup>™</sup>